

Assembly Instructions

NEW spa Chattanooga Deck



1


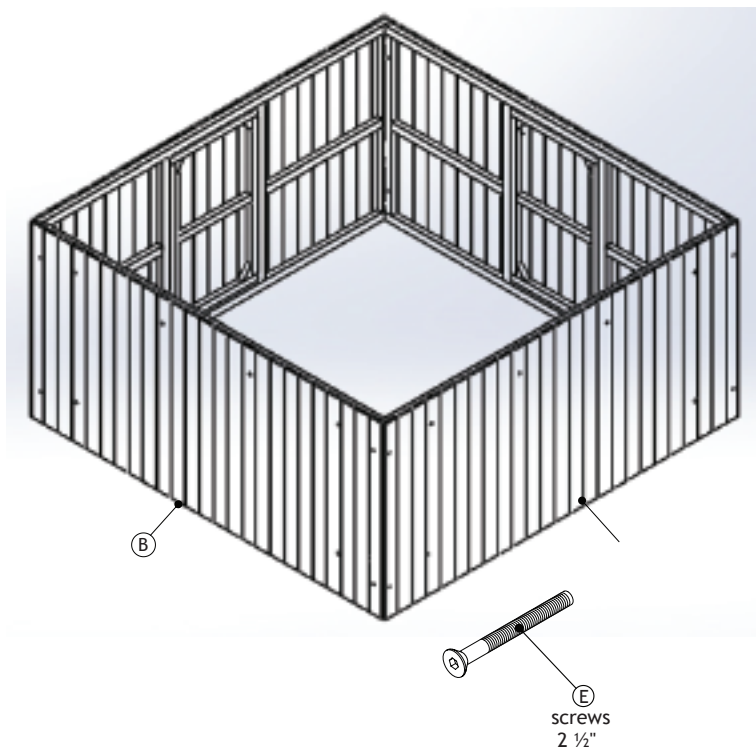


TABLE	PARTS
PARTS	QUANTITY
A	1
B	1
C	1
D	1
E	8
Total	12

Tools required



Star screwdriver

To level the pieces each carries parts levelers.



Do not hit or hammer.
(only where indicated)



No paints or use abrasives to clean the cabinet.
if necessary repaint the deck use Impranol



Carefully read and follow in sequence assembly instructions.



Do not use chlorine products

Before you start assemble furniture, read the instructions. Use caution when unpacking the deck to keep track packing with screws as these are subject to the skirts.


Assembly Instructions

NEW spa Chattanooga Deck




2

Explosion

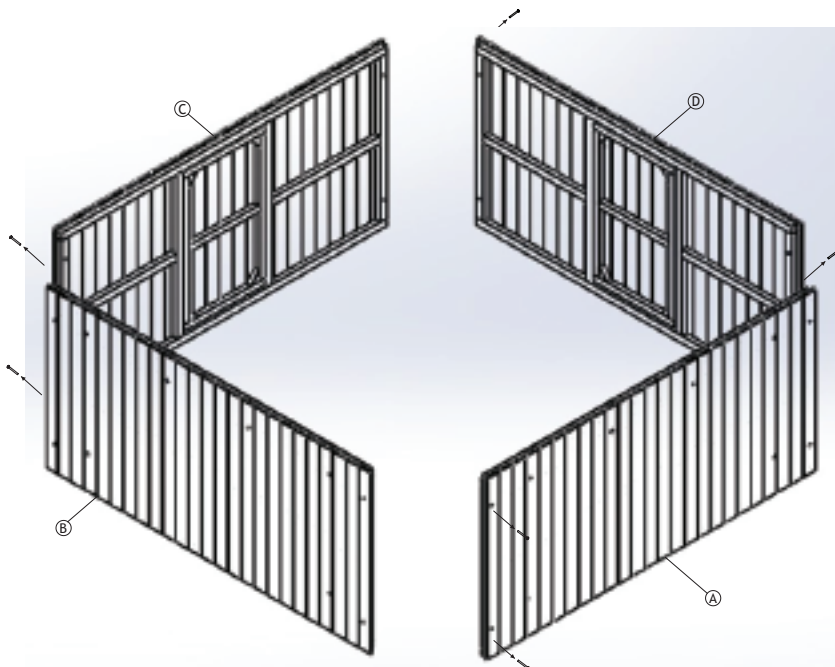


1

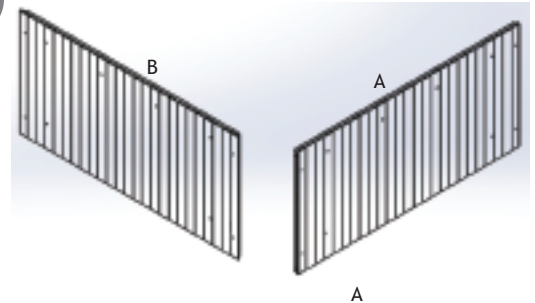


Locate the parts A and B

2

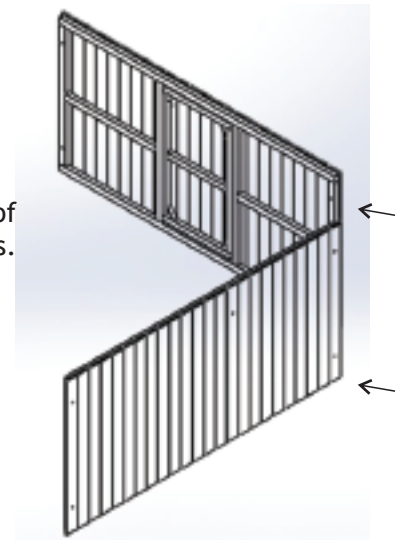

With localized parts, align the holes of the skirt with the location of the inserts.

3

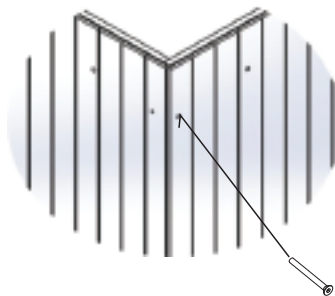


When you have located the parts with the screw holes and insert the screw until it is tight

4

The aprons have on the inside, inserts which receive the screws

Repeat these instructions for each of the corners and tails, following the consecutive of parts.

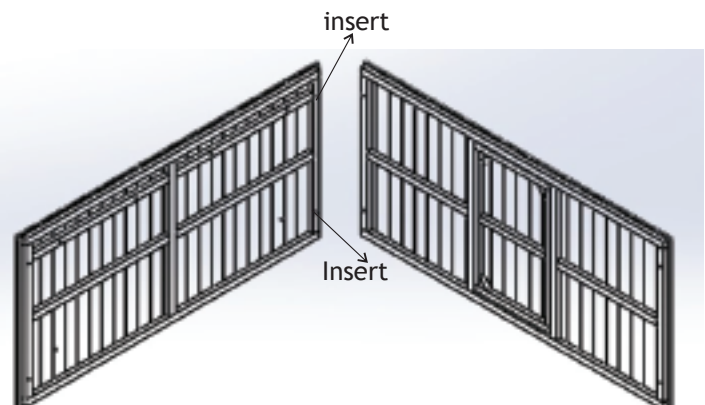

Assembly Instructions

NEW spa Chattanooga SUNBED



3


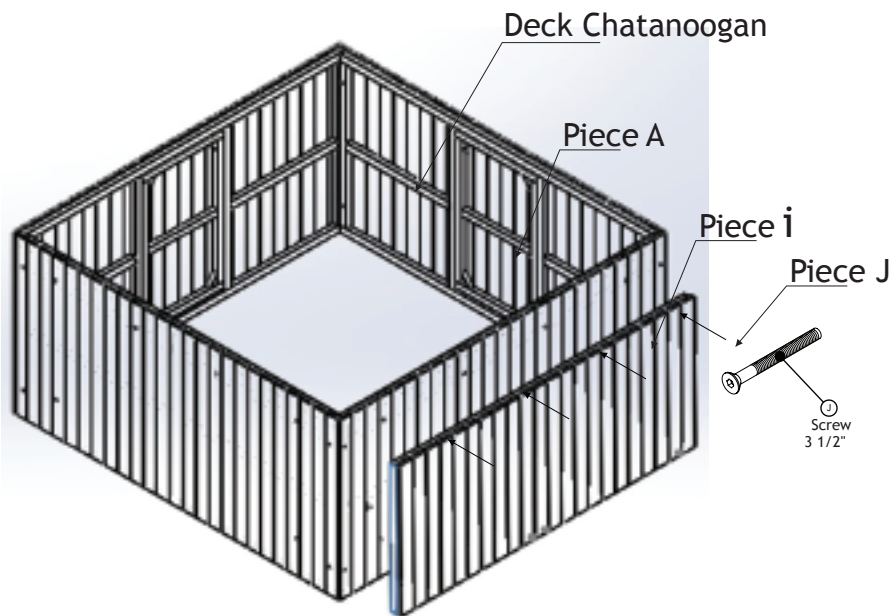


TABLE	PARTS
PIECE	QUANTITY
i	1
J	6
Total	7

ORDEN DE PRODUCCIÓN

CÓDIGO:

FECHA:

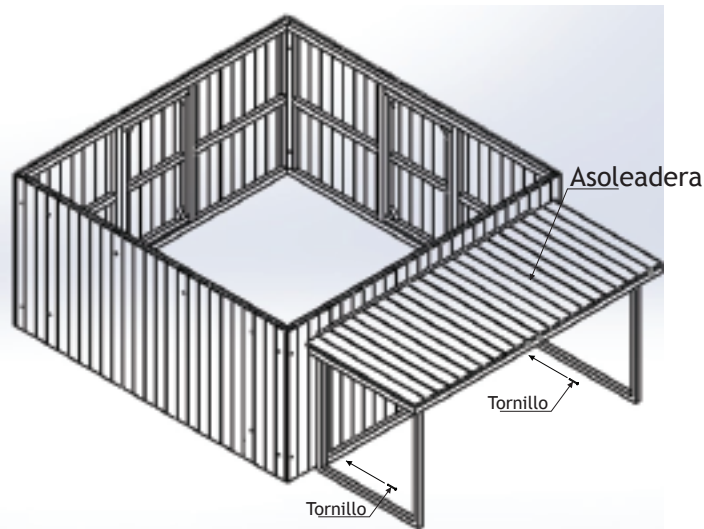

1

Take the piece and closed together with part A (To identify this piece is the piece visually on the outside has 6 holes, 4 top, 2 below).

2

Align the 4 holes above the deck with 4 part (I) and (A) then secure with screws.

Secured with the 4 screws, open the SUN BED and support on metal structures. They finish securing with screws in the lower holes



Dirección: Autopista Sur CII 29 # 41-15 Itagüí- Antioquia- Colombia
 Fax: (574)281 76 07 apartado aéreo A.A. 53059 Medellín - Colombia
 Email: servicioalcliente@firplak.com página web: www.firplak.com
 Conmutador: (574) 444 17 71